


WEST COAST INSULATION INC

Measuring for Pipe Insulation

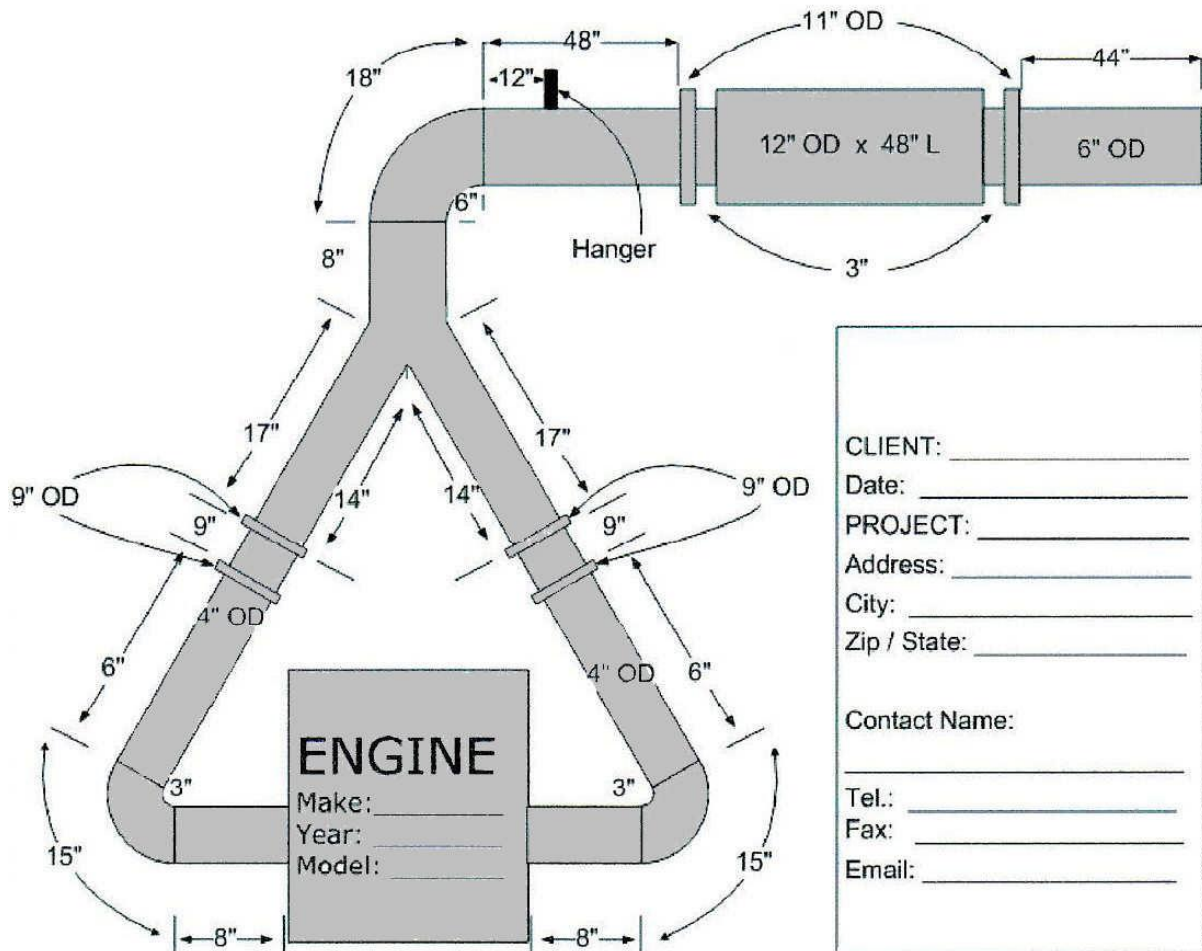

Easy Steps:

1. Draw a simple two dimensional diagram showing the side view of all elbows, flanges, hangers, supports and obstructions.
2. Provide exact weld to weld dimensions and outside dimensions of all parts.
Measurement is critical of both inside and outside curve on all elbows and bends.
3. Use details to avoid confusing and cluttering your drawing. Take your time, make your drawing clear and detailed. Make sure to show all dimensions.
4. Fax your drawing and instructions to 206-297-1708 or email them to chris@wcinsulation.com. Call 206-459-0440 if you have any questions.